


5x7/5x9 4' and 8' Tower- Bushlan Outfitter Blind

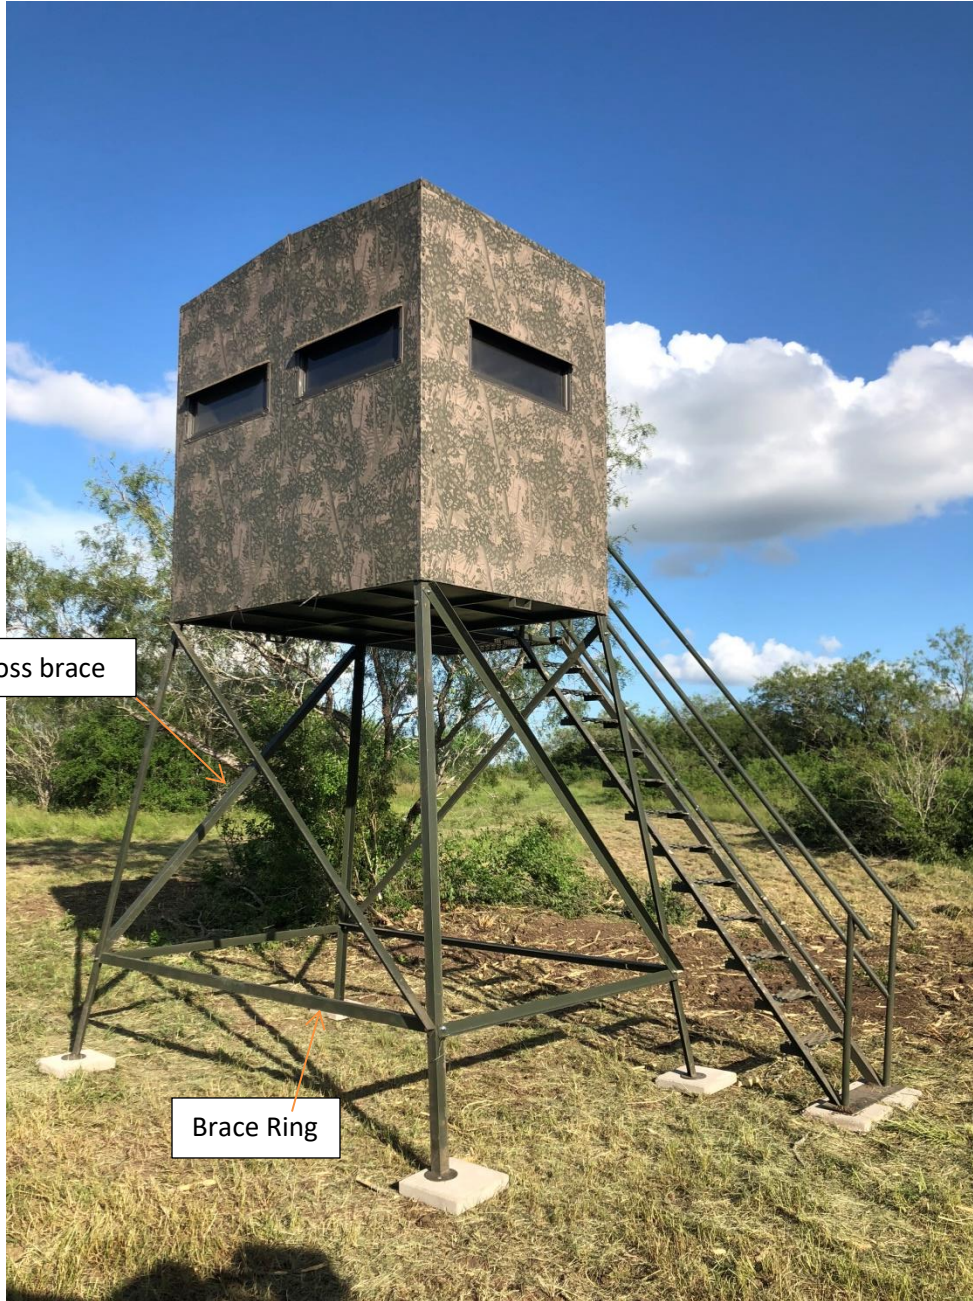

Included
 (1/2"x1 1/4") 16-Nuts (4')
 (9/16"x2") 2-Staircase Bolts

Tools Needed
 (3/4", 7/8", 13/16") Wrench
 (3/4") Socket
 Cordless Drill

Instructions

- Raise Blind
 - Stub legs (with feet) to all 4 corners and put bolts in and loosely tighten nut
 - Attach "cross braces" to top of each outside leg on the top hole and loosely bolt. Allow them to hang as you continue. (See chart for measurements)
 - Attach the "brace ring" around the bottom of blind and loosely bolt (See chart for measurements)
 - Attach staircase. With staircase bolts
 - Tighten all bolts.
 - Recommendation-Tie down kit for 8' models.
- Tips: Start from door when attaching metal (legs then braces)

Blind Size	Brace Ring (long and short side)	Cross Brace (long and short side)
5x7 4'	88" and 64"	N/A
5x7 8"	100" and 69"	116" and 97.5"
5x9 4'	112 1/2" and 62 1/2"	N/A
5x9 8'	124" and 72 3/4"	134.5" and 96.5"